

Quick Start: Install the Guardian Visibility System

Your Kit Includes:

- | | |
|---------------------------------------|---------------------------------|
| (1) Tive Solo 5G Tracker | (1) Packet of Dielectric Grease |
| (1) Tive Temperature Beacon | (1) Cleaning Rag |
| (1) Wiring Harness | (4) Cleaning Swabs |
| (1) Large Guardian Visibility Placard | (1) Zip Tie |
| (1) Small Guardian Visibility Placard | (1) Roll of White Duct Tape |

You will also need:

- Socket Wrench
- Step Ladder
- Permanent Marker
- Optional: Pliers or Wire Cutters
- Optional: Dowel Rod

Step 1: Check Reefer Battery Location & Drain Hole

1. Open the reefer cowling at the front of the trailer.
2. Find which side the reefer battery is on.
3. Look for a drain hole on the same side at the bottom front of the trailer.
 - o If there is a drain hole, move to Step 2.
 - o If no drain hole, stop and call us for further instructions.

Scan for Install Video




Step 2: Activate your Tive Solo 5G

1. Check that the barcode on the Tive Solo 5G matches the barcode on the Guardian Visibility placards.
2. Press “Start” on the Tive Solo 5G until the blue light appears.



Step 3: Activate your Temperature Beacon

1. Press “Check” on the Tive Temperature Beacon until the blue indicator light appears.

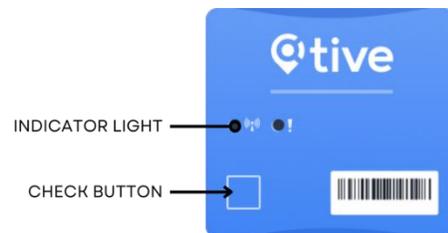

Step 4: Prepare the Installation Area

1. Inside the trailer, go to the front near the reefer head on the same side as the battery.
2. Ensure that the drain hole is clear of debris.
3. Clean a spot 3 feet off the deck on the front wall next to the reefer frame.
4. Let the area dry before continuing.

Step 5: Install the Tive Solo 5G

1. Remove the adhesive backing from the Solo 5G.
2. Attach it to the clean/dry spot.



Step 6: Install the Wiring Harness

1. Exit the trailer and go to the reefer unit.
2. Find the small connector box in the middle of the harness.
3. Feed the solid black wire with the Micro-USB connector up through the drain hole.
4. Clean and dry a spot under the reefer unit and a strip running down to the bottom edge of the trailer.
5. Stick the connector box to the side of the trailer with the solid black wire facing down.

Step 7: Connect to the Reefer Battery

1. Feed the red/black wire up through the cowling to reach the battery.
2. Connect the red wire to the battery's POS (+) terminal.
3. Connect the black wire to the battery's NEG (-) terminal.

Step 8: Connect the Solo 5G

1. Inside the trailer, open the charging port on the Solo 5G.
2. Apply a small amount of dielectric grease to the charging port.
3. Plug the Micro-USB connector end of the harness into the Solo 5G.
4. Secure any extra wire using zip tie and white duct tape.

Step 9: Install the Temperature Beacon

1. Move to the rear of the trailer by the doors.
2. Clean a spot on the roof between the doors.
3. Peel the adhesive backing off the Beacon and press it firmly onto the clean/dry spot.
 - o You may need a step ladder.

Step 10: Install the Interior Placard (Large)

1. Inside the trailer, move to the right wall, adjacent to the rear doors.
2. Clean an area large enough for the placard.
3. Peel off the adhesive backing and press the large placard firmly in place.
4. Use a permanent marker to write your trailer number on the placard.



Step 11: Install the Exterior Placard (Small)

1. Exit the trailer and close the doors.
2. Find a suitable spot on the rear left door.
3. Clean the area, peel the backing, and press the small placard firmly in place.

Step 12: Register your Trailer & Device

1. Visit GuardianViz.com/register to register your trailer and activate your account.

Tip: Use the included Setup Information sheet to record your trailer and device numbers so you have them ready for online registration.

Setup Complete! Your Guardian Visibility system is now ready. Within 24 hours, your primary contact will receive an email with instructions to access the portal.

All Done! Your Guardian Visibility system is now installed and ready to go!